


TOA Sports BSO Controller

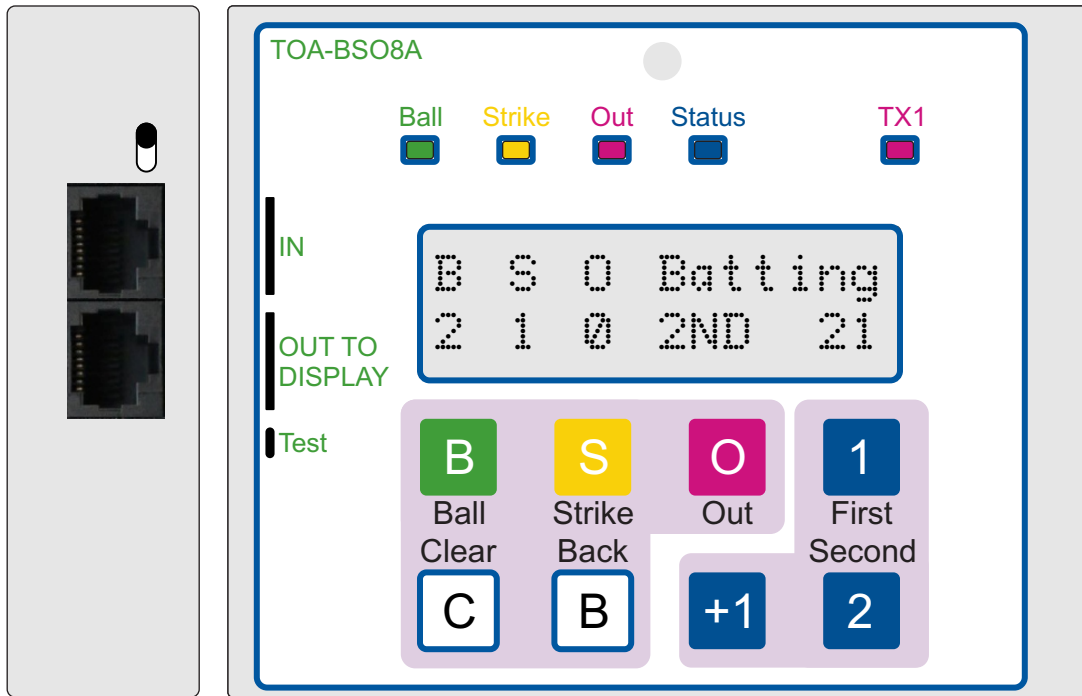

Ball

B

Ball - Tap to add one ball to the display and increments the number of pitches. Four balls clears the B,S display.

Strike

S

Strike - Tap to add one strike to the display and increments the number of pitches. Three strikes clears the B,S display.

Out

O

Out - Tap to add one Out to the display. Three Outs clears the B,S,O display.

Clear

C

Clear - Tap to clear the B,S,O display. Long press to clear the number of pitches.

Back

B

Back - Return to the previous state. (One time)
Tap multiple times to decrement the number of pitches for the selected team.

First

1

First (1) - Tap to change batting to the first team.

Second

2

Second (2) - Tap to change batting to the second team

+1

+1 - Tap to Increment the pitches display. Hold to continue incrementing the number of pitches.